

# Pulegge a gole trapezoidali per montaggio con bussola conica SER-SIT®.

## Nuovi standard costruttivi

In giallo sono evidenziate le differenze.

### SPZ - Z - 3V

Articolo	Attuale		Nuovo	
	Bussola conica	Figura	Bussola conica	Figura
<b>"PBT" SPZ - Z - 3V</b>				
PBT100SPZ3	1610	2	1610	<b>10</b>
PBT106SPZ1	1210	1	<b>1610</b>	1
PBT106SPZ2	1610	2	1610	<b>10</b>
PBT106SPZ3	1615	1	<b>1610</b>	<b>10</b>
PBT106SPZ4	2012	10	<b>1610</b>	10
PBT118SPZ2	1610	2	1610	<b>10</b>
PBT118SPZ5	2012	2	2012	<b>10</b>
PBT132SPZ1	1610	4	1610	1
PBT132SPZ2	1610	5	1610	<b>10</b>
PBT132SPZ5	2517	2	2517	<b>10</b>
PBT140SPZ1	1610	4	1610	1
PBT140SPZ2	1610	5	1610	<b>10</b>
PBT150SPZ1	1610	4	1610	1
PBT150SPZ2	2012	4	2012	1
PBT150SPZ3	2012	5	2012	2
PBT160SPZ1	1610	4	1610	1
PBT160SPZ2	2012	4	2012	1
PBT160SPZ3	2012	5	2012	2
PBT160SPZ4	2517	5	2517	2
PBT160SPZ5	2517	5	2517	2
PBT180SPZ4	2517	5	2517	2
PBT180SPZ5	2517	5	2517	2
PBT200SPZ5	2517	6	2517	<b>11</b>
PBT224SPZ3	2012	5	2012	6
PBT224SPZ5	2517	5	2517	6
PBT250SPZ3	2012	6	2012	9
PBT280SPZ2	2012	7	2012	3
PBT280SPZ3	2517	7	2517	3
PBT280SPZ4	2517	8	2517	9
PBT280SPZ5	2517	8	2517	9
PBT355SPZ2	2012	7	2012	3
PBT355SPZ4	2517	8	2517	9
PBT355SPZ5	2517	8	2517	9
PBT450SPZ1	2517	7	2517	3
PBT450SPZ2	2517	7	2517	3
PBT450SPZ3	2517	7	2517	3
PBT450SPZ4	3020	8	3020	9
PBT450SPZ5	3020	8	3020	9
PBT500SPZ5	3020	9	<b>3030</b>	3

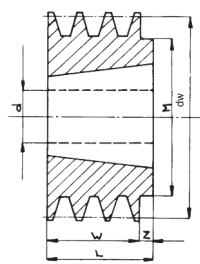


fig. 1

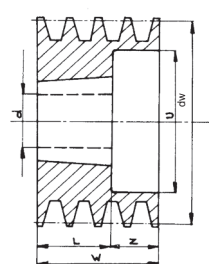


fig. 2

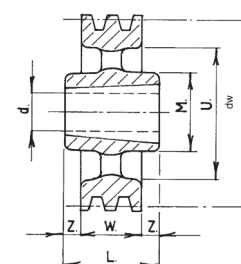


fig. 3

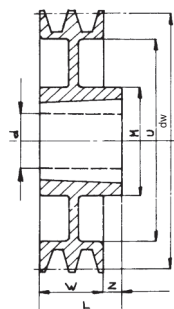


fig. 4

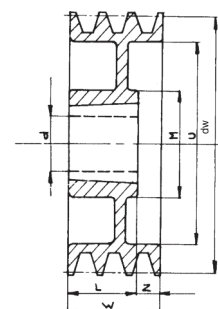


fig. 5

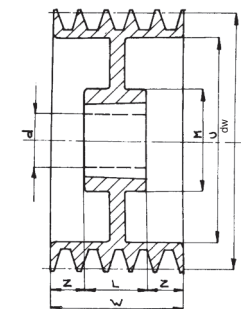


fig. 6

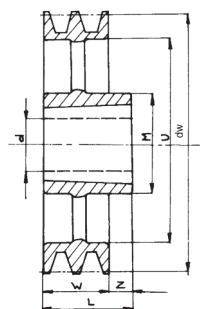


fig. 7

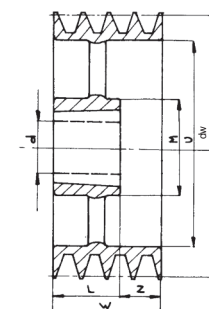


fig. 8

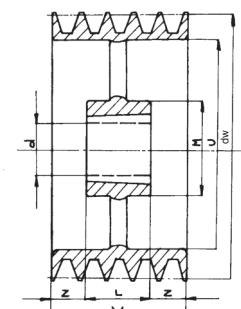


fig. 9

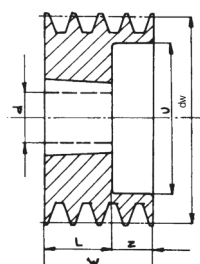


fig. 10

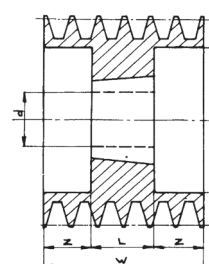


fig. 11

Pulegge Trapezoidali - PBT

In giallo sono evidenziate le differenze.

**SPA - A**

Articolo	Attuale		Nuovo	
	Bussola conica	Figura	Bussola conica	Figura
<b>"PBT" SPA - A</b>				
PBT090SPA4	1610	10	<b>1615</b>	10
PBT095SPA4	1610	11	<b>1615</b>	<b>10</b>
PBT100SPA2	1610	2	1610	<b>10</b>
PBT100SPA4	1610	2	<b>1615</b>	<b>10</b>
PBT112SPA2	1610	2	1610	<b>10</b>
PBT118SPA2	1610	2	1610	<b>10</b>
PBT140SPA1	1610	4	1610	<b>1</b>
PBT140SPA2	2012	2	2012	<b>10</b>
PBT150SPA1	1610	4	1610	<b>1</b>
PBT150SPA2	2012	2	2012	<b>10</b>
PBT160SPA1	1610	4	1610	<b>1</b>
PBT160SPA2	2012	5	2012	<b>10</b>
PBT170SPA1	1610	4	1610	<b>1</b>
PBT170SPA2	2012	5	2012	<b>10</b>
PBT170SPA3	2517	5	2517	<b>10</b>
PBT170SPA4	2517	5	2517	<b>2</b>
PBT170SPA5	2517	6	2517	<b>11</b>
PBT180SPA2	2012	5	2012	<b>6</b>
PBT180SPA3	2517	5	2517	<b>10</b>
PBT180SPA4	2517	5	2517	<b>2</b>
PBT190SPA2	2012	5	2012	<b>6</b>
PBT190SPA3	2517	5	2517	<b>10</b>
PBT190SPA4	2517	5	2517	<b>2</b>
PBT200SPA2	2517	4	2517	<b>14</b>
PBT200SPA4	3020	5	3020	<b>2</b>
PBT200SPA5	3020	6	3020	<b>11</b>
PBT224SPA4	3020	5	3020	<b>2</b>
PBT224SPA5	3020	5	3020	<b>2</b>
PBT236SPA3	2517	5	2517	<b>6</b>
PBT280SPA4	3020	6	3020	<b>9</b>
PBT355SPA5	3020	9	<b>3535</b>	<b>7</b>
PBT400SPA3	3020	3	3020	<b>7</b>
PBT450SPA3	3020	3	3020	<b>7</b>
PBT450SPA5	3020	9	<b>3535</b>	<b>7</b>
PBT500SPA3	3020	3	3020	<b>7</b>
PBT560SPA4	3535	7	3535	<b>3</b>
PBT630SPA2	3020	7	3020	<b>3</b>
PBT630SPA4	3535	7	3535	<b>3</b>

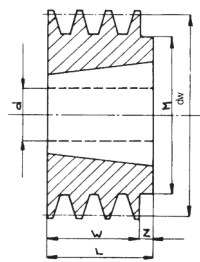


fig. 1

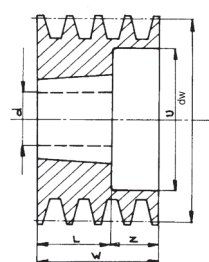


fig. 2

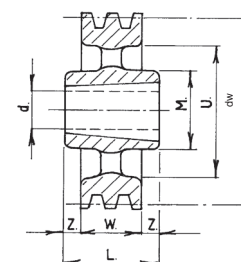


fig. 3

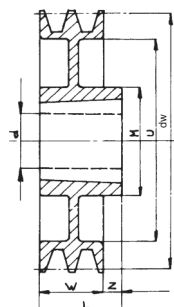


fig. 4

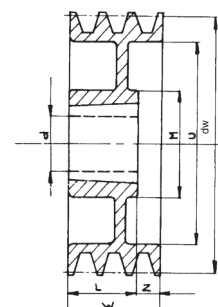


fig. 5

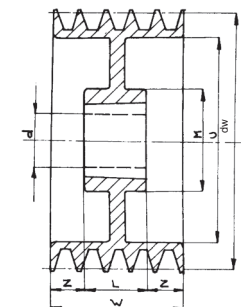


fig. 6

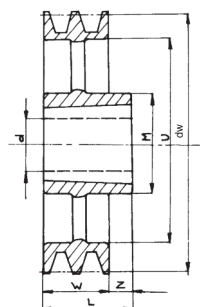


fig. 7

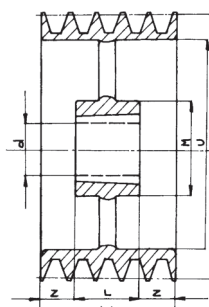


fig. 9

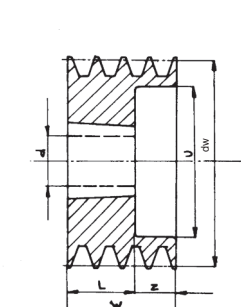


fig. 10

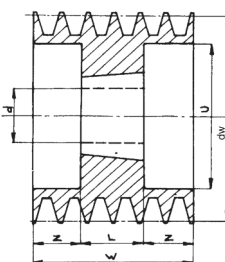


fig. 11

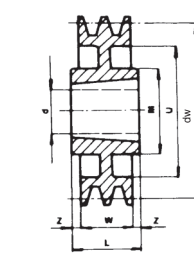


fig. 14

In giallo sono evidenziate le differenze.

**SPB - B - 5V**

Articolo	Attuale		Nuovo	
	Bussola conica	Figura	Bussola conica	Figura
<b>"PBT" SPB - B- 5V</b>				
PBT180SPB2	2517	4	2517	<b>1</b>
PBT180SPB3	2517	5	2517	<b>10</b>
PBT180SPB4	2517	6	2517	<b>11</b>
PBT180SPB8	3020	11	<b>3030</b>	11
PBT190SPB1	2012	4	2012	<b>1</b>
PBT190SPB2	2517	4	2517	<b>1</b>
PBT190SPB3	2517	5	2517	<b>10</b>
PBT190SPB4	2517	6	2517	<b>11</b>
PBT190SPB8	3020	11	<b>3030</b>	11
PBT200SPB2	2517	4	2517	<b>1</b>
PBT200SPB3	2517	5	2517	<b>2</b>
PBT200SPB5	3020	6	3020	<b>11</b>
PBT200SPB6	3020	6	3020	<b>11</b>
PBT212SPB5	3020	6	3020	<b>11</b>
PBT224SPB5	3020	6	3020	<b>11</b>
PBT236SPB3	2517	6	2517	<b>5</b>
PBT250SPB5	3535	6	3535	<b>11</b>
PBT250SPB6	3535	6	3535	<b>11</b>
PBT250SPB8	3535	6	3535	<b>11</b>
PBT300SPB6	3535	5	3535	<b>6</b>
PBT355SPB6	3535	8	3535	<b>9</b>
PBT400SPB5	3535	8	3535	<b>9</b>
PBT400SPB6	3535	8	3535	<b>9</b>
PBT450SPB2	3020	7	3020	<b>3</b>
PBT560SPB2	3020	7	<b>3030</b>	<b>3</b>
PBT560SPB5	3535	8	<b>4040</b>	<b>7</b>
PBT560SPB8	4040	9	<b>4545</b>	9
PBT630SPB2	3535	7	<b>3030</b>	<b>3</b>
PBT630SPB8	5050	9	<b>4545</b>	9
PBT900SPB5	4545	3	<b>4040</b>	<b>7</b>
PBT1250SPB4	5050	3	<b>4545</b>	3
PBT1250SPB5	5050	3	<b>4545</b>	3

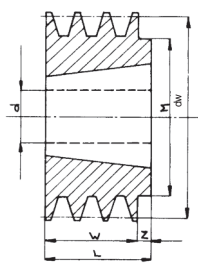


fig. 1

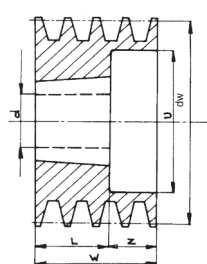


fig. 2

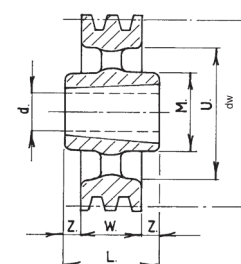


fig. 3

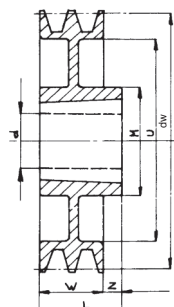


fig. 4

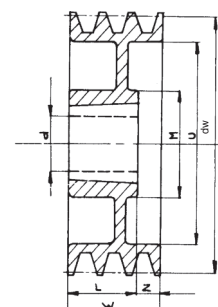


fig. 5

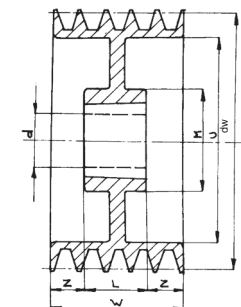


fig. 6

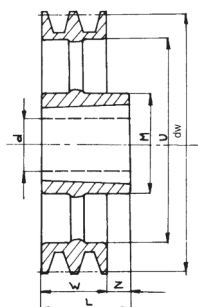


fig. 7

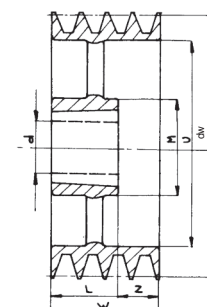


fig. 8

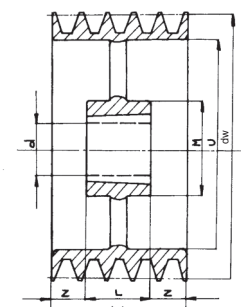


fig. 9

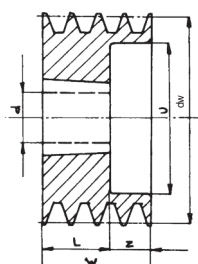


fig. 10

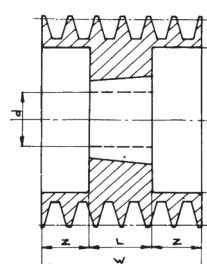


fig. 11

Pulegge Trapezoidali - PBT

In giallo sono evidenziate le differenze.

### SPC - C

Articolo	Attuale		Nuovo	
	Bussola conica	Figura	Bussola conica	Figura
<b>"PBT" SPC - C</b>				
PBT224SPC4	3020	11	<b>3535</b>	11
PBT224SPC8	3535	13	3535	<b>11</b>
PBT236SPC8	3535	13	3535	<b>11</b>
PBT250SPC3	3020	6	3020	<b>11</b>
PBT265SPC3	3020	6	<b>3535</b>	<b>1</b>
PBT265SPC4	3535	6	3535	<b>11</b>
PBT265SPC5	3535	6	3535	<b>11</b>
PBT265SPC6	3535	6	3535	<b>11</b>
PBT265SPC8	3535	6	3535	<b>11</b>
PBT280SPC3	3020	6	<b>3535</b>	<b>1</b>
PBT280SPC5	3535	6	3535	<b>11</b>
PBT280SPC8	4040	11	<b>3535</b>	11
PBT300SPC8	4040	6	4040	<b>11</b>
PBT315SPC6	4040	6	<b>3535</b>	6
PBT315SPC8	4040	6	4040	<b>11</b>
PBT335SPC6	4040	6	<b>3535</b>	6
PBT355SPC5	4040	6	<b>3535</b>	6
PBT355SPC6	4040	6	<b>3535</b>	6
PBT400SPC5	4040	9	<b>3535</b>	9
PBT400SPC8	5050	6	<b>4545</b>	6
PBT450SPC6	4040	9	<b>4545</b>	9
PBT500SPC4	4040	9	<b>3535</b>	9
PBT500SPC6	4040	9	<b>4545</b>	9
PBT560SPC5	4040	9	<b>4545</b>	9
PBT630SPC4	4040	9	<b>4545</b>	9

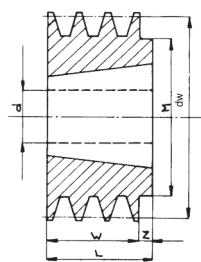


fig. 1

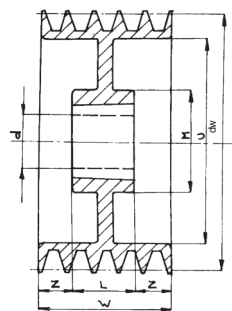


fig. 6

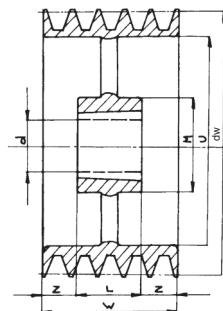


fig. 9

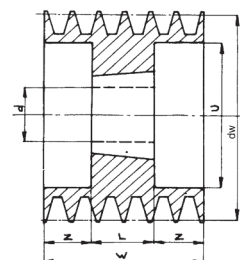


fig. 11

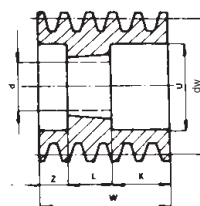


fig. 13